



STANDARD AND
HEAVY DUTY

BOOM POLE

FEATURES

Standard lifts up to
1,000 lbs

Heavy duty lift up to
2,000lbs on rear loop

Heavy lifting made effortless

YANMAR BOOM POLE

The Boom Pole excels at jobs where heavy lifting up to a 1,000 pounds* is required. Load items on trailers, pull up old fence posts, or haul heavy lumber quickly and easily. Lift up to 1000 lbs. on the rear loop and up to 500 lbs. on the front loop. Implement capacity only, do not exceed the lift capacity of your tractor.

YANMAR HEAVY-DUTY BOOM POLE

The Heavy-Duty Boom Pole makes heavy lifting effortless! Use the Boom Pole as a handy crane to hoist car engines, move boulders or pull up fence posts. The list is endless. Lift up to 2,000 lbs.* on the rear loop, up to 1,000 lbs. on the front loop. Implement capacity only, do not exceed the lift capacity of your tractor.

ITEM	YBP20	YBP30
Tractor horsepower required	20 minimum	
Implement type	Boom pole	
Approx. Weight	66 lbs.	150 lbs.
Length	85.5"	95"
Width	32"	40"
Height	25.5"	24.5"
Lift capacity*	1000 lbs. (Rear loop)/ 500 lbs. (Front loop)	2000 lbs. (Rear points)/ 1000 lbs. (Front loop)
Hitch	Cat 1	Cat 1 & 2
Quick hitch compatible	No	Yes
Features	Multiple welded lifting loops	HD Category 1 and 2 hitch pins, Multiple welded lifting points

Yanmar has a corporate policy of continuous product improvement and development; therefore, data, specifications, and warranty are subject to change without any advance notice. There may be differences between the specifications and illustrations contained in this publication and the actual equipment. Equipment components produced by other manufacturers may be shown in photographs in this publication for the purpose of illustration only and is not intended as an endorsement of that particular equipment or its suitability. Inspect equipment before using it and be sure it is operating properly. The product depictions are not meant to be used or relied upon as a substitute for the safety and use information that is published in the respective operator's manuals. Before operating a machine, read, understand, and follow all instructions in the manual and on the machine. Yanmar disclaims all representations, express or implied, or any liability from the use of this publication.

To learn more or to find a dealer nearest you, please visit YanmarTractor.com.

